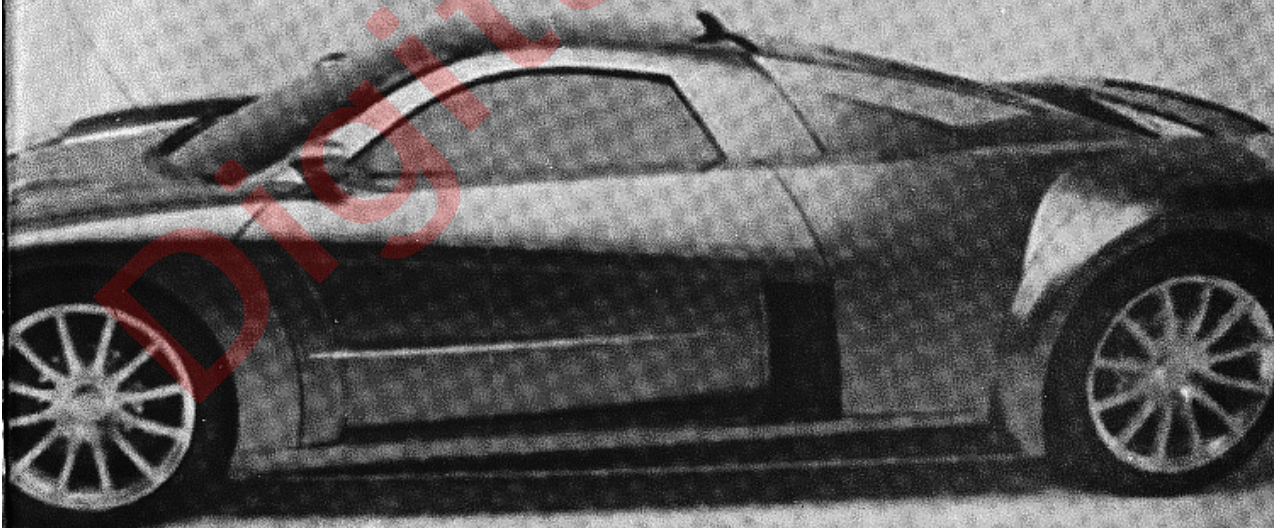


---

**THE VEHICLE SECURITY SYSTEM**

# **USER MANUAL**




MODEL: S007-3


## ALARM SYSTEM ILLUSTRATION


### (I) Operating instruction :

#### 1. Button (I) setting button


Disarming status, press button  once to enter alarm mode , lock , lamp flash once, siren sound once

Running status, press button  once, lock

Arming status, press button  once to locating vehicle, lamp flash one times, siren sound one seconds

Arming status, press button  for 3 seconds, lamp flash 20 times, siren sound 20 seconds

#### 2. Button (II) releasing button


In running status, press button  once ,unlock


In voice arming status, press button  once,light flash twice, siren soundtwice, unlock

 

In mute arming status, press button  once, light flash twice,siren not sound unlock

In disarming and running status, press button  for three seconds,open trunk


#### 3. button (III) mute button

In disarming status, press button  once, light flash once, enter into mute arming status



In arming status, press button  once, lamp flash 20 times,to locating vehicle


In running status, press button  once,lamp flash 20 seconds, press  button one time again, stop flashing, 15 seconds later, siren sound loudly, lamp flash , ignition cut power

#### 4. button (IV) locating vehicle button


In arming status and running status, press button  button, lamp flashing, siren sound 20 seconds to locating vehicle, press it again, stop



#### 5. Set option:

In running status, press  +  button for five seconds, siren sound once,enter setting option status:




A. Press  for 2 seconds, siren sound once, lamp flash once, set opening door and delay time alarming

**5. Locating vehicle:**


1. In arming status, press  button, siren sound 1 seconds, lights flash 1 times, to locate vehicle

2. In arming status, press  or  button, lights flash 20 seconds, to locate vehicle

**6. Anti-hijacking mode:**

In running status, press button  once, light flash, press  button once again, 15 Seconds later, siren will sound louder, system will cut power, press  button, to disarm this status

**7. Robotizing central door lock:**

Step on the foot brake after ignition is turned on, central door will lock after 5 seconds automatically to keep vehicle safe when running; central doors unlock when ignition be turned off and press button  central door locks unlock

**8. Impact memory:**

When system's power be cut, system will remind the previous status after it be provided the power again

**9. Open door and lights flash: (optional, system is default)**

In disarming status, if door open, lights flash, it will stop after 16 seconds otherwise it will not flash

**10. System reset:**

Open door, step on the brake, turn key ON to OFF, step on the ON status, system release abnormal state

## SPECIFICATION

### Main unit

Operating voltage: 12V+2V

Static current: 7MA(exclude LED)

Standby current: <18mA(include LED indicator and shock sensor)

Shock sensor: <1MA

Output current(Max) for direction light:10A\*2,

for central control lock 15A

for siren:1A

# Wire connection

